 


SINGER

348K

MACHINE NO. 348K

List of Parts— SINGER* Machine No. 348K


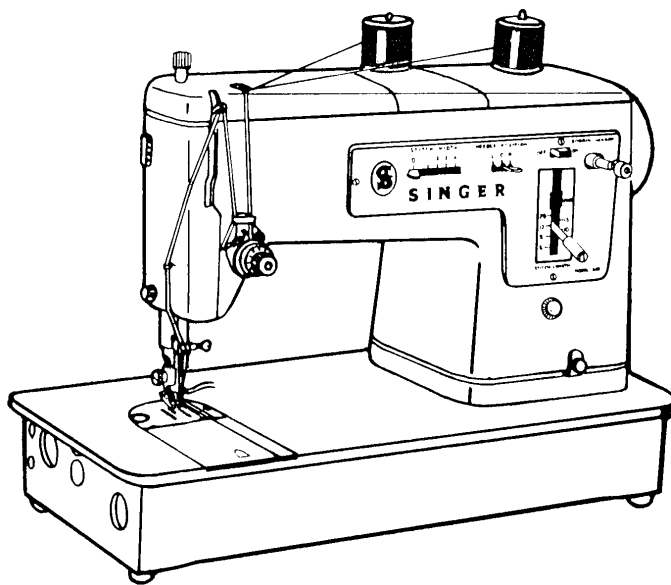


ATTACHMENT SET 101540

32773	Presser Foot
161127	Zipper Foot
161172	Seam Guide
161295	Screwdriver (SM)
161609	Tube of Oil
161613	Presser Foot
161612	Button Foot
161894	Raising Plate
161895	Throat Plate
172336	Bobbin (Plastic) (3)
276302	Fashion Disc 2
276303	Fashion Disc 3
276305	Fashion Disc 5
276306	Fashion Disc 6
276308	Fashion Disc 8
276309	Fashion Disc 9
276310	Fashion Disc 10
276312	Fashion Disc 12
276313	Fashion Disc 13
276319	Fashion Disc 19
276321	Fashion Disc 21
276326	Fashion Disc 26
276331	Fashion Disc 31
2020(15x1)	Needles 14 (3)
21475(Rev.)	Instruction Book





 
 
List of Parts—Machine No. 348K

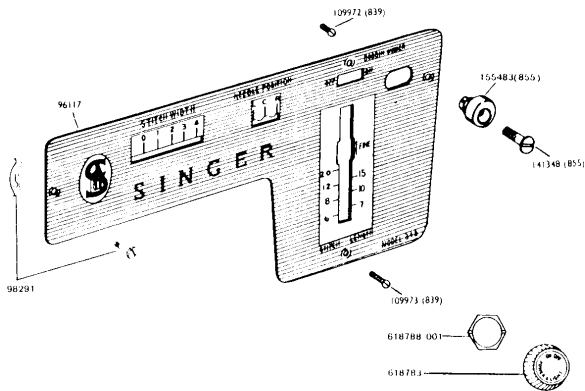



98010-012
81563(638) 98009-012

Suffix varies according to voltage.
See Parts List Section.

 
 
 
 
98009-012

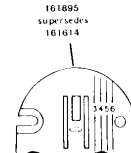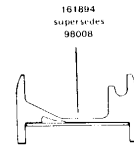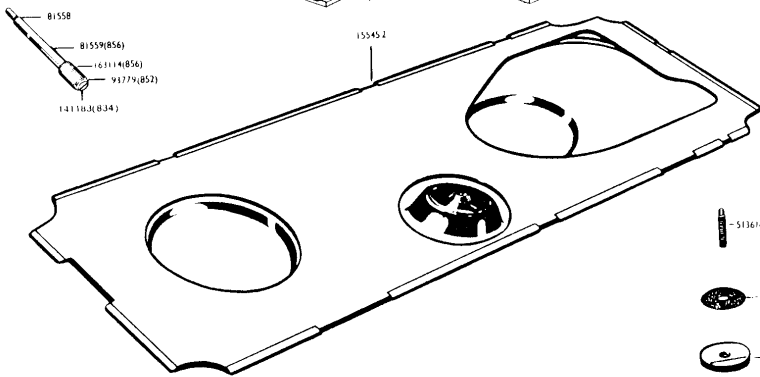

  For other discs see
Parts List Section
No. 276302 to 276331




    SINGER[®] SNK 4/ENK 4 for 337K, 338K, 347K & 348K Machines

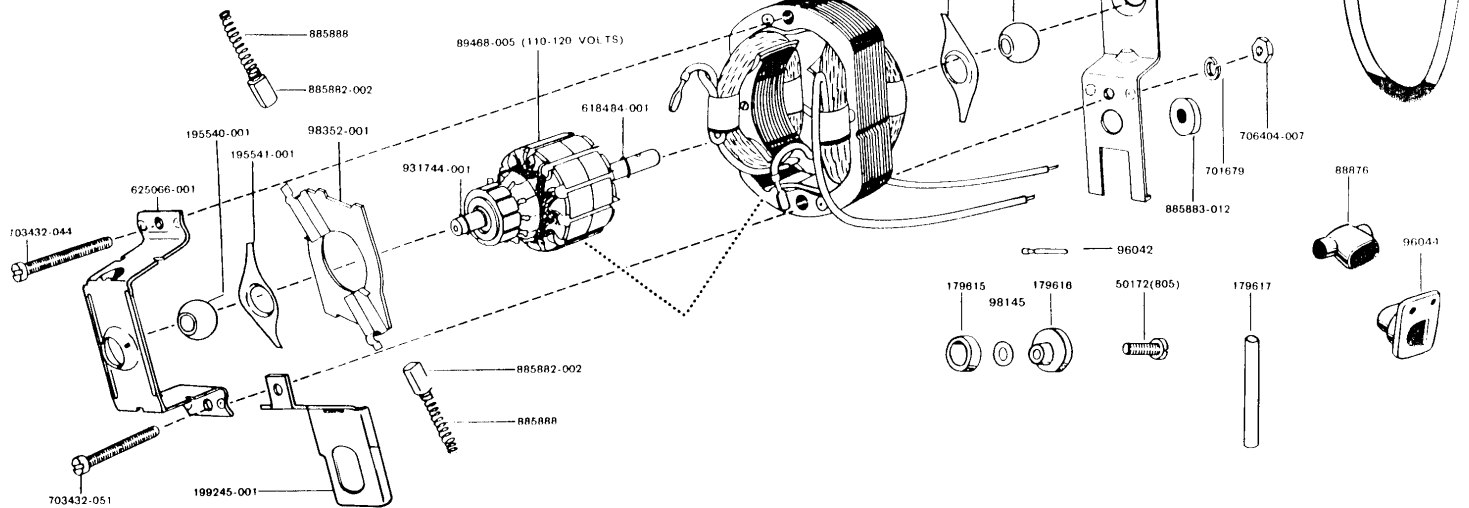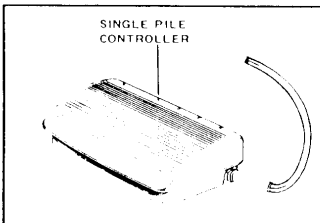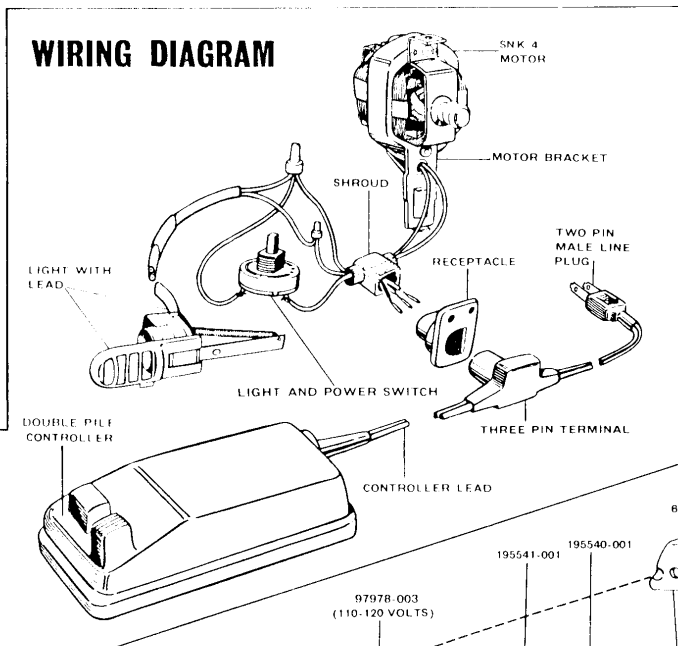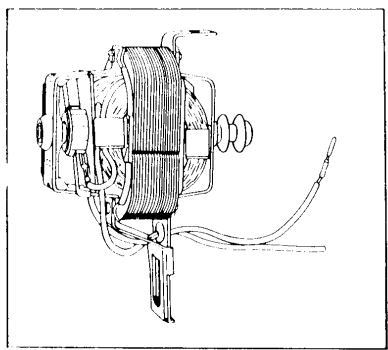


Form 730 - SNK4 Motor

 SNK 4/ENK 4 MOTOR

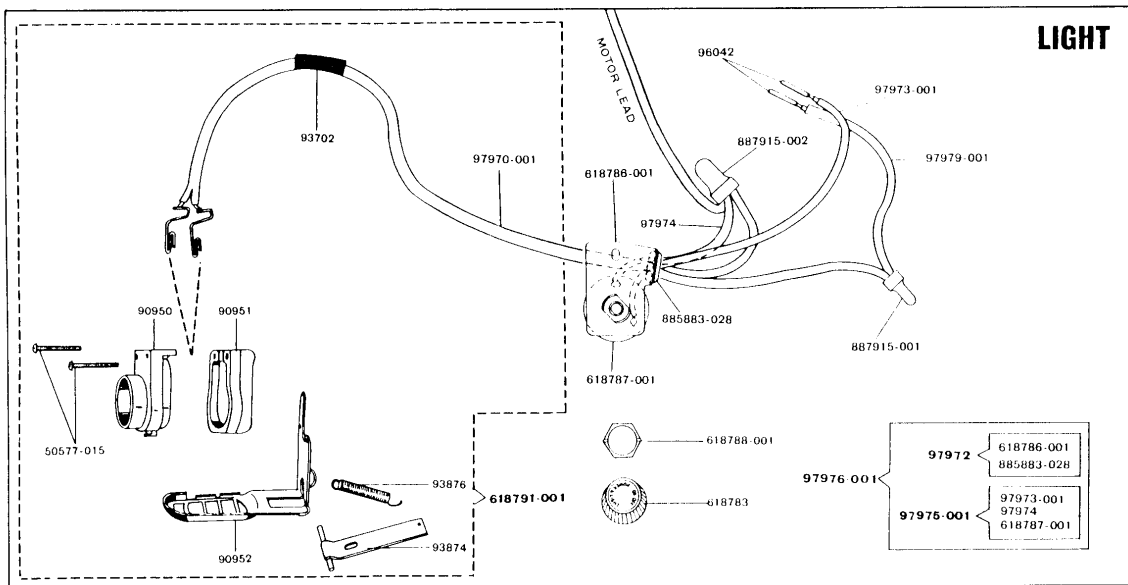

89480-017 (95-145 VOLTS)

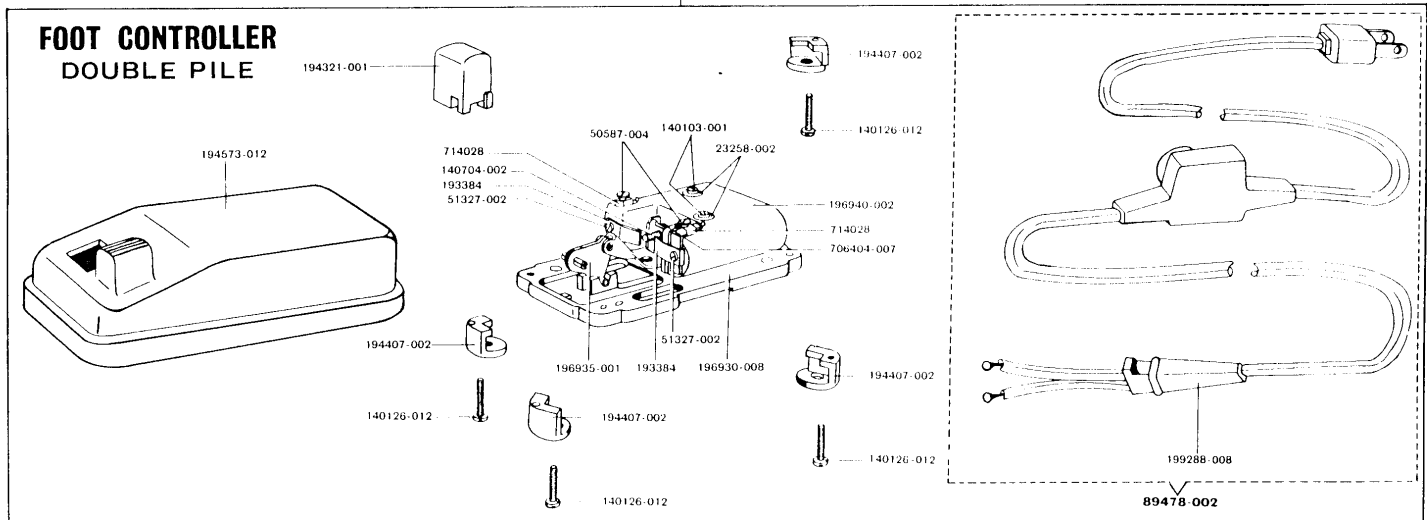 

**FOOT CONTROLLER
SINGLE PILE**

SNK 4/ENK 4 MOTOR

618776 004 (95 - 145 VOLTS)

